


AIR FORCE SPECIALTY CODE 4B051 BIOENVIRONMENTAL ENGINEERING

Soil/Solid Sampling Strategy

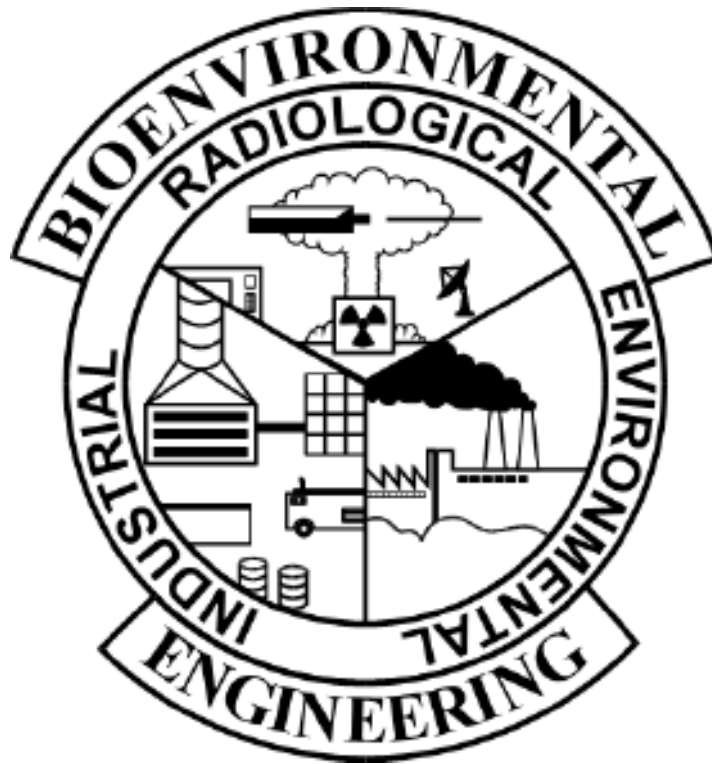

QUALIFICATION TRAINING PACKAGE

Accessibility: *Publications and forms are available on the e-publishing website at <http://www.e-publishing.af.mil> for downloading or ordering.*

Releasability: *There are no releasability restrictions on this publication.*

Table of Contents

STS Line Item 4.5.3.2: Determine or establish soil/solid sampling strategies	1
TRAINER GUIDANCE.....	1
TASK STEPS.....	2
TRAINEE REVIEW QUESTIONS	4
PERFORMANCE CHECKLIST.....	6
ANSWERS.....	7
STS Line Item 4.5.3.3(a): Collect soil / solid samples (Auger)	9
TRAINER GUIDANCE.....	9
TASK STEPS.....	10
TRAINEE REVIEW QUESTIONS	11
PERFORMANCE CHECKLIST.....	12
ANSWERS.....	13
STS Line Item 4.5.3.3(b): Collect soil / solid samples (Chip/Core sample).....	14
TRAINER GUIDANCE.....	14
TASK STEPS.....	15
TRAINEE REVIEW QUESTIONS	16
PERFORMANCE CHECKLIST.....	17
ANSWER	18
STS Line Item 4.5.3.3(c): Collect soil / solid samples (Spade, scoop or trowel).....	19
TRAINER GUIDANCE.....	19
TASK STEPS.....	20
TRAINEE REVIEW QUESTIONS	21
PERFORMANCE CHECKLIST.....	22
ANSWERS.....	23
STS Line Item 4.5.3.3(d): Collect soil / solid samples (Trier sampler)	24
TRAINER GUIDANCE.....	24
TASK STEPS.....	25
TRAINEE REVIEW QUESTIONS	26
PERFORMANCE CHECKLIST.....	27
ANSWERS.....	28
STS Line Item 4.5.3.3(e): Collect soil / solid samples (Veihmeyer tube sampler)	29
TRAINER GUIDANCE.....	29
TASK STEPS.....	30
TRAINEE REVIEW QUESTIONS	31
PERFORMANCE CHECKLIST.....	32
ANSWERS.....	34

STS Line Item 4.5.3.4.2: FT-IR (e.g., HazMatID)	35
TRAINER GUIDANCE.....	35
TASK STEPS.....	36
PERFORMANCE CHECKLIST.....	38
 STS Line Item 4.5.3.5: Field analyze soil/solid samples	40
TRAINER GUIDANCE.....	40
TASK STEPS.....	41
TRAINEE REVIEW QUESTIONS	44
PERFORMANCE CHECKLIST.....	47
ANSWERS.....	48
 STS Line Item 4.5.3.6: Interpret soil sample results	50
TRAINER GUIDANCE.....	50
TASK STEPS.....	51
TRAINEE REVIEW QUESTIONS	52
PERFORMANCE CHECKLIST.....	53
ANSWERS.....	54
 STS Line Item 4.5.3.7: DOEHRS data entry	55
TRAINER GUIDANCE.....	55
TASK STEPS.....	56
TRAINEE REVIEW QUESTIONS	57
PERFORMANCE CHECKLIST.....	58
ANSWERS.....	59

STS Line Item 4.5.3.2: Determine or establish soil/solid sampling strategies

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step by step procedures for doing the task.
Prerequisites:	None
Training References:	<ul style="list-style-type: none"> • Installation Waste Analysis Plan, if available • EPA Manual SW-846, <i>Test Methods for Evaluating Solid Waste, Physical/Chemical Methods</i> • EPA SOP 2012, <i>Soil Sampling</i> • BE Field Manual November 2012
Additional Supporting References:	<ul style="list-style-type: none"> • EPA Publication 9355.4-23, <i>Soil Screening Guidance: User's Guide</i> • 40 CFR 261, <i>Identification and Listing of Hazardous Waste</i>
CDC Reference:	4B051
Training Support Material:	<p>Example Scenario:</p> <p>The trainee is currently assigned to Camp Freeya in Ubetchastan on the periphery of a flood plain. Adjacent to the area of interest is a metal manufacturing plant, slightly uphill and upwind of proposed sleeping area. Heavy metals specifically chromium are expected to be present in the rocky soil area as indicated by wet ground leading from the plant. In addition wet soil was noticed near one sleeping tent. So as part of the OEHS/CSM, the trainee is expected to develop a soil sampling strategy based on the above intelligence data.</p>
Specific Techniques:	Conduct hands-on training and evaluation.
Criterion Objective:	Given activity assessment data, listed reference(s) and location documentation, determine/establish a soil/solid sampling strategy, successfully completing all checklist items with limited assistance on only the hardest parts.
Notes: This TRAINING MODULE is designed to work in conjunction with TRAINING MODULES 4.5.3.3 Collect soil/solid samples and 4.5.3.5 Field analyze soil/solid samples and serves to create a comprehensive 3-step plan of instruction that comprehensively assesses the student's ability to: <ul style="list-style-type: none"> • develop soil/solid sampling methodologies, • conduct analysis • select and utilize equipment for collecting samples and field analysis. 	

TASK STEPS

1. Determine sampling location(s).
 - 1.1. Identify source analysis indicating area of contamination and contaminants¹.
 - 1.2. Conduct interviews of personnel in or around area.
 - 1.3. Consider areas further away from the site of actual or suspected contamination to determine the extent of the contamination.
 - 1.4. Consider appropriateness and location(s) of Control Samples.
2. Determine Soil Type(s)².
3. Determine sampling method(s).
 - 3.1. Statistical Sampling³.
 - 3.2. Non-statistical Sampling⁴.
4. Determine sampling types(s)⁵.
5. Determine sampling depth⁶.
6. Determine type of sampling equipment, devices and supplies required⁷.
7. Document findings⁸.

LOCAL REQUIREMENTS:

NOTES:

1. Methods of identification include locating leaking containers or pipes, areas of wet, oily or discolored soil, dead vegetation, and/or an unpleasant odor. Use of direct reading equipment (DRI) sampling equipment may be considered in order to get an idea of what type of CBRN material might have contaminated the soil.
2. Soil Types;
 - Sand
 - Silt
 - Clay
3. Statistical Sampling:
 - Simple random sampling
 - Stratified random sampling
 - Systematic grid sampling
 - Hot spot sampling
4. Non-statistical Sampling:
 - Biased Sampling
 - Judgemental Sampling
5. Determine sampling types(s):
 - Homogenized
 - Composite
 - Sieving

- Volatile organic compounds sampling
 - Clay
6. Determine sampling depth:
- Surface sampling
 - Subsurface sampling
7. Selection of specific sampling devices to be used, equipment required and supplies to be used should be based on previous task steps. Samples should reflect the concentration of contaminants at the site and can be used to make decisions and conclusions about the entire site.
8. Proper documentation is a critical step in a sampling methodology. Details that should be documented include:
- site location,
 - date/time of contaminant release,
 - date/time samples were collected,
 - sample number,
 - collector's name,
 - description of the samples,
 - possible sources of contamination release,
 - any identifying marks on containers and drums in the area,
 - local weather at the sampling site, and
 - results of any on-site monitoring.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.2: Determine or establish soil/solid sampling strategies

1. What are the two reasons for conducting soil sampling?

2. What type of sampling is used to investigate large sites that contain a number of soil types, topographic features or land uses?

3. When is biased sampling used?

4. Match the sample type with its correct definition.

Homogenized sampling	A. Utilizes several sampling devices.
Composite sampling	B. Process of combining and homogenizing several individual soil samples.
Volatile organic compounds sampling	C. Type of sampling that is representative of the total sample collected.

5. Based on the example scenario, what would be the best soil sampling approach and what would be your recommendations to the commander?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.2: Determine or establish soil/solid sampling strategies

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step by step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Determine sampling location(s)?			
1.1. Identify source analysis indicting area of contamination and contaminants?			
1.2. Conduct interviews of personnel in or around area?			
1.3. Consider areas further away from the site of actual or suspected contamination to determine the extent of the contamination?			
1.4. Consider appropriateness and location(s) of Control Samples?			
2. Determine the soil type(s)?			
3. Determine sampling method(s)?			
3.1. Statistical Sampling?			
3.2. Non-statistical Sampling?			
4. Determine sampling types?			
5. Determine sampling depth(s)?			
6. Determine type of sampling equipment, devices and supplies required?			
7. Document findings?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. What are the two reasons for conducting soil sampling?

A: Health risk assessment and for remediation.

(Source: Career Development Course 4B051)

2. What type of sampling is used to investigate large sites that contain a number of soil types, topographic features or land uses?

A: Stratified random sampling.

(Source: Career Development Course 4B051)

3. When is biased sampling used?

A: Biased sampling is used when information is available that suggests specific contamination in specific areas of a site.

(Source: Career Development Course 4B051)

4. Match the sample type with its correct definition.

A:

Homogenized sampling A: C	A. Utilizes several sampling devices.
Composite sampling A: B	B. Process of combining and homogenizing several individual soil samples.
Volatile organic compounds sampling A: A	C. Type of sampling that is representative of the total sample collected.

(Source: Career Development Course 4B051)

5. Based on the example scenario, what would be the best soil sampling approach and what would be your recommendations to the commander?

A:

Statistical Sampling: Hot spot sampling.

A complete pathway was identified linking chromium in a single hot spot of contaminated soil at the entrance of one isolated sleeping tent in Ubetchastan. Sampling has determined that the concentration of chromium is slightly below applicable environmental standards.

Control options provided to the commander are:

- Remove contaminated soil ASAP
- Remove personnel from tent near contamination and distribute them among other tents
- Provide containment for contaminated soil and remove before rainy season
- Relocate the tent since the source may be transported to the site via flood water

(Source: BE Field Manual Nov 2012)

STS Line Item 4.5.3.3(a): Collect soil / solid samples (Auger)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	U.S. EPA Environmental Response Team (ERT)/REAC SOP 2012, <i>Soil Sampling</i>
Additional Supporting References:	<ul style="list-style-type: none"> • U.S. EPA Environmental Response Team (ERT)/REAC SOP 2001, <i>General Field Sampling Guidelines</i> • ASTM D 4700, <i>Standard Guide for Soil Sampling from the Vadose Zone</i> • ASTM D 1452-80, <i>Standard Practice for Soil Investigation and Sampling by Auger Borings</i>
CDC Reference:	4B051
Training Support Material:	<ul style="list-style-type: none"> • auger tube sampler • PPE (boots, gloves, eye protection) • Plastic sheeting or tarp • Sample container(s) • Sample labels • Decontamination supplies
Specific Techniques:	Conduct hands-on training and evaluation. Consider training related core task items with this item: Training Module 4.5.3.2, <i>Determine or establish soil/solid sampling strategies</i> , and Training Module 4.5.1.3, <i>Prepare and/or preserve samples for shipment</i> .
Criterion Objective:	Given the appropriate sampling equipment, collect a soil sample successfully completing all checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>The 4.5.3.3 series Training Modules [(Spade, scoop or trowel)(Trier sampler)(Veihmeyer tube sampler)(Auger)(Chip/Core sample)] convey task steps for individual sample collection techniques that may or may not be used by all BE flights. Trainers should select and focus training only to the modules that support specific training requirements at their installation. Refer to the flight Master Training Plan for specific training requirements.</p> <p>Ensure safety measures are used when collecting samples. Assess all hazards associated with the situation (i.e. hazardous atmosphere, hazardous conditions, etc.) and don appropriate PPE.</p> <p>Augers screw into the soil and churn the soil to be sampled. Hand augers can reach depths of up to 4 feet, and gas powered augers can reach up to 12 feet.</p>	

TASK STEPS

1. Identify sample location and requirements.¹
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary.
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary.
4. Spread plastic sheeting on the ground at each sampling location to help prevent cross-contaminating sampling equipment, contaminating the surrounding area and facilitate back-filling the hole.
5. Assemble the auger per the manufacturer's instructions, if necessary.
6. Begin drilling, periodically removing and depositing accumulated soil onto the plastic sheet.
7. Remove the auger from the hole slowly and carefully after reaching the desired depth.
8. Collect a sufficient volume of sample based on the type(s) of analyses to be performed.
9. Transfer the sample into the appropriate container.²
10. Cap and label the container properly.
11. Initiate sample preservation methods, as appropriate.
12. Clean/decontaminate sampling equipment between samples and after use.
13. Record data in OEHMIS (DOEHRS or equivalent), as appropriate.

LOCAL REQUIREMENTS:**NOTES:**

1. Where, how much, equipment needed, etc. The sample strategy, if available, should address these issues.
2. If composite samples are to be collected, place sample in a stainless steel bowl for mixing, continue sampling and mix additional samples thoroughly with a stainless steel laboratory spoon or equivalent, and then transfer into the appropriate container.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.3(a): Collect soil / solid samples (Auger)

1. Manual and powered auger can reach what depths, respectively?

2. What are the two types of augers?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.3(a): Collect soil / solid samples (Auger)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify sample location and requirements?			
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary?			
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary?			
4. Spread plastic sheeting on the ground at each sampling location to help prevent cross-contaminating sampling equipment, contaminating the surrounding area and facilitate back-filling the hole?			
5. Assemble the auger per the manufacturer's instructions, if necessary?			
6. Begin drilling, periodically removing and depositing accumulated soil onto the plastic sheet?			
7. Remove the auger from the hole slowly and carefully after reaching the desired depth.			
8. Collect a sufficient volume of sample based on the type(s) of analyses to be performed?			
9. Transfer the sample to the appropriate container?			
10. Cap and label the container properly?			
11. Initiate sample preservation methods, as appropriate?			
12. Clean/decontaminate sampling equipment between samples and after use?			
13. Record data in OEHMIS (DOEHRS or equivalent), as appropriate?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. Manual and powered auger can reach what depths, respectively?

A: Manual augers can reach depths of up to 4 feet, and gas powered augers can reach up to 12 feet.

(Source: Career Development Course 4B051)

2. What are the two types of augers?

A: Bucket and Screw.

(Source: Career Development Course 4B051)

STS Line Item 4.5.3.3(b): Collect soil / solid samples (Chip/Core sample)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	U.S. EPA Environmental Response Team (ERT)/REAC SOP #2011, <i>Chip, Wipe, And Sweep Sampling</i> (available at: http://www.epaossc.org/site/doc_list.aspx?site_id=2107)
Additional Supporting References:	None
CDC Reference:	None
Training Support Material:	<ul style="list-style-type: none"> • Hammer • Chisel and tongs • PPE (gloves and eye protection) • Sample container(s) • Sample labels • Decontamination supplies
Specific Techniques:	Conduct hands-on training and evaluation. Consider training related core task items with this item: Training Module 4.5.3.2, <i>Determine or establish soil/solid sampling strategies</i> , and Training Module 4.5.1.3, <i>Prepare and/or preserve samples for shipment</i> .
Criterion Objective:	Given the appropriate sampling equipment, collect a solid sample successfully completing all checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>The 4.5.3.3 series Training Modules [(Spade, scoop or trowel)(Trier sampler)(Veihmeyer tube sampler)(Auger)(Chip/Core sample)] convey task steps for individual sample collection techniques that may or may not be used by BE flights. Trainers should select and focus training only to the modules that support specific training requirements at their installation. Refer to the flight Master Training Plan for specific training requirements.</p> <p>Ensure safety measures are used when collecting samples. Assess all hazards associated with the situation (i.e. hazardous atmosphere, hazardous conditions, etc.) and don appropriate PPE.</p> <p>Chip sampling is appropriate for porous surfaces and is generally accomplished with hammer and chisel. The sampling device should be laboratory cleaned and wrapped in clean, autoclaved aluminum foil until ready for use. To collect the sample, a measured and marked off area is chipped both horizontally and vertically to an even depth of 1/8 inch. The sample is then transferred to the proper sample container.</p>	

TASK STEPS

1. Identify sample location and requirements.¹
2. Prepare sample containers per the servicing laboratory or appropriate guidance, if necessary.
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary.
4. Don disposable gloves.
5. Chip the sample area horizontally and vertically to an even depth.
6. Transfer the sample into the appropriate container.²
7. Cap and label the container .
8. Initiate sample preservation methods, as appropriate.
9. Clean/decontaminate sampling equipment between samples and after use.
10. Record data in OEHMIS (DOEHRS or equivalent), if applicable.

LOCAL REQUIREMENTS:**NOTES:**

1. (Where, how much, equipment needed, etc.) The sample strategy, if available, should address these issues.
2. Collect an adequate volume of sample based on the type(s) of analyses to be performed.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.3(b): Collect soil / solid samples (Chip/Core sample)

- | |
|--|
| 1. When collecting a chip sample displaying multiple layers, how many layers need to be obtained? |
| 2. In gathering a core sample in a location known to be contaminated, where should the initial sample be collected? |
| 3. In obtaining multiple core samples from a location what is a critical necessary step in order to avoid cross contamination? |

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.3(b): Collect soil / solid samples (Chip/Core sample)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify sample location and requirements?			
2. Prepare sample containers per the servicing laboratory or appropriate guidance, if necessary?			
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary?			
4. Don disposable gloves?			
5. Chip the sample area horizontally and vertically to an even depth?			
6. Place the sample into the appropriate container?			
7. Cap and label the container?			
8. Initiate sample preservation methods?			
9. Clean/decontaminate sampling equipment between samples and after use?			
9. Record data in OEHMIS (DOEHRS or equivalent), if applicable?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWER

1. When collecting a chip sample displaying multiple layers, how many layers need to be obtained?

A: Representation of all layers needs to be collected.

(Source: Career Development Course 4B051)

2. In gathering a core sample in a location known to be contaminated, where should the initial sample be collected?

A: From the area of least contamination.

(Source: Career Development Course 4B051)

3. In obtaining multiple core samples from a location what is a critical necessary step in order to avoid cross contamination?

A: Always decontaminate your sampling collection device(s) and change gloves between each sample.

(Source: Career Development Course 4B051)

STS Line Item 4.5.3.3(c): Collect soil / solid samples (Spade, scoop or trowel)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	U.S. EPA Environmental Response Team (ERT)/REAC SOP #2012, <i>Soil Sampling</i> (available at: http://www.epaossc.org/site/doc_list.aspx?site_id=2107)
Additional Supporting References:	<ul style="list-style-type: none"> • U.S. EPA Environmental Response Team (ERT)/REAC SOP 2001, <i>General Field Sampling Guidelines</i> • ASTM D 4700, <i>Standard Guide for Soil Sampling from the Vadose Zone</i> • ASTM D 5633, <i>Standard Practice for Sampling with a Scoop</i>
CDC Reference:	4B051
Training Support Material:	<ul style="list-style-type: none"> • Spade, scoop, or trowel • Shovel • PPE (apron, gloves, eye protection) • Sample container(s) • Sample labels • Decontamination supplies
Specific Techniques:	Conduct hands-on training and evaluation. Consider training related core task items with this item: Training Module 4.5.3.2, <i>Determine or establish soil/solid sampling strategies</i> , and Training Module 4.5.1.3, <i>Prepare and/or preserve samples for shipment</i> .
Criterion Objective:	Given the appropriate sampling equipment, collect a soil sample successfully completing all checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>The 4.5.3.3 series Training Modules [(Spade, scoop or trowel)(Trier sampler)(Veihmeyer tube sampler)(Auger)(Chip/Core sample)] convey task steps for individual sample collection techniques that may or may not be used by BE flights. Trainers should select and focus training only to the modules that support specific training requirements at their installation. Refer to the flight Master Training Plan for specific training requirements.</p> <p>Ensure safety measures are used when collecting samples. Assess all hazards associated with the situation (i.e. hazardous atmosphere, hazardous conditions, etc.) and don appropriate PPE.</p> <p>The collection of samples from near-surface soil can be accomplished with tools such as spades, shovels, trowels, and scoops. Surface material is removed to the required depth and a stainless steel or plastic scoop is used to collect the sample. Do not use plastic utensils when sampling for semivolatile compounds.</p>	

TASK STEPS

1. Identify the sample location and requirements.¹
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary.
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary.
4. Clear area of extraneous material (leaves, twigs).
5. Carefully remove top layer of soil to the desired sample depth with a clean device.
6. Remove a thin layer of soil from the area which came in contact with the spade using a clean stainless steel scoop, spoon, or trowel.
7. Insert scoop or trowel into material and extract sample.²
8. Transfer the sample into the appropriate container.³
9. Cap and label the container properly.
10. Initiate sample preservation methods, as appropriate.
11. Clean/decontaminate sampling equipment between samples and after use.
12. Record data in OEHMIS, as appropriate.

LOCAL REQUIREMENTS:**NOTES:**

1. Where, how much, equipment needed, etc. The sample strategy, if available, should address these issues.
2. Collect an adequate volume of sample based on the type(s) of analyses to be performed.
3. If composite samples are to be collected, place sample in a stainless steel bowl for mixing, continue sampling and mix additional samples thoroughly with a stainless steel laboratory spoon or equivalent, and then transfer into the appropriate container. If volatile organic analysis is to be performed, immediately transfer the sample directly into an appropriate, labeled sample container with a stainless steel spoon, or equivalent, and secure the cap tightly to ensure that the volatile fraction is not compromised.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.3(c): Collect soil / solid samples (Spade, scoop or trowel)

1. List criteria for appropriate selection of a sampling device:

2. What materials are trowels, scoops and shovels typically made of?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.3(c): Collect soil / solid samples (Spade, scoop or trowel)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify the sample location and requirements?			
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary?			
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary?			
4. Clear area of extraneous material (leaves, twigs)?			
5. Remove the top layer of soil to the desired sample depth with a clean device?			
6. Remove a thin layer of soil from the area which came in contact with the spade using a clean stainless steel scoop, spoon, or trowel?			
7. Insert scoop or trowel into material and extract sample?			
8. Transfer the sample into the appropriate container?			
9. Cap and label the container properly?			
10. Initiate sample preservation method, as appropriate?			
11. Clean/decontaminate sampling equipment between samples and after use?			
12. Record data in OEHMIS, as appropriate?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. List criteria for appropriate selection of a sampling device:

A: How far you need to go down into the soil, the type of soil being sampled, the analytes of concern and the type of samples you will be collecting (disturbed or undisturbed).

(Source: Career Development Course 4B051)

2. What materials are trowels, scoops and shovels typically made of?

A: Stainless steel or plastic.

(Source: Career Development Course 4B051)

STS Line Item 4.5.3.3(d): Collect soil / solid samples (Trier sampler)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	U.S. EPA Environmental Response Team (ERT)/REAC SOP #2012, <i>Soil Sampling</i> (available at: http://www.epaossc.org/site/doc_list.aspx?site_id=2107)
Additional Supporting References:	<ul style="list-style-type: none"> • U.S. EPA Environmental Response Team (ERT)/REAC SOP 2001, <i>General Field Sampling Guidelines</i> • ASTM D 4700, <i>Standard Guide for Soil Sampling from the Vadose Zone</i> • ASTM D 5451, <i>Standard Practice for Sampling Using a Trier Sampler</i>
CDC Reference:	4B051
Training Support Material:	<ul style="list-style-type: none"> • Trier sampler • PPE (apron, gloves, eye protection) • Sample container(s) • Sample labels • Decontamination supplies
Specific Techniques:	Conduct hands-on training and evaluation. Consider training related core task items with this item: Training Module 4.5.3.2, <i>Determine or establish soil/solid sampling strategies</i> , and Training Module 4.5.1.3, <i>Prepare and/or preserve samples for shipment</i> .
Criterion Objective:	Given the appropriate sampling equipment, collect a soil sample successfully completing all checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>The 4.5.3.3 series Training Modules [(Spade, scoop or trowel)(Trier sampler)(Veihmeyer tube sampler)(Auger)(Chip/Core sample)] convey task steps for individual sample collection techniques that may or may not be used by all BE flights. Trainers should select and focus training only to the modules that support specific training requirements at their installation. Refer to the flight Master Training Plan for specific training requirements.</p> <p>Ensure safety measures are used when collecting samples. Assess all hazards associated with the situation (i.e. hazardous atmosphere, hazardous conditions, etc.) and don appropriate PPE.</p> <p>A trier sampler is a narrow tube (with a T-handle) that is open on one side and is used primarily for sampling of loose soil on the surface or just under the surface. It is not recommended for compacted soil, clay or rocky soil. To use the trier, you simply drive the sampler into the soil and scoop up the sample.</p>	

TASK STEPS

1. Identify the sample location and requirements.¹
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary.
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary.
4. Insert the trier into the material to be sampled at a 0° to 45° angle from horizontal.
5. Rotate the trier once or twice to cut a core of material.
6. Slowly withdraw the trier, making sure that the slot is facing upward.
7. Transfer the sample into the appropriate container.^{2,3}
8. Cap and label the container properly.
9. Initiate sample preservation methods, as appropriate.
10. Clean/decontaminate sampling equipment between samples and after use.
11. Record data in OEHMIS, as appropriate.

LOCAL REQUIREMENTS:**NOTES:**

1. Where, how much, equipment needed, etc. The sample strategy, if available, should address these issues.
2. Collect an adequate volume of sample based on the type(s) of analyses to be performed.
3. If composite samples are to be collected, place sample in a stainless steel bowl for mixing, continue sampling and mix additional samples thoroughly with a stainless steel laboratory spoon or equivalent, and then transfer into the appropriate container.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.3(d): Collect soil / solid samples (Trier sampler)

1. When sampling with a trier, the trier is inserted at what angle?

2. In what soil type is the trier sampler is NOT recommended?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.3(d): Collect soil / solid samples (Trier sampler)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify the sample location and requirements?			
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary?			
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary?			
4. Insert the trier into the material to be sampled at a 0° to 45° angle from horizontal?			
5. Rotate the trier once or twice to cut a core of material?			
6. Slowly withdraw the trier, making sure that the slot is facing upward?			
7. Transfer the sample to the appropriate container?			
8. Cap and label the container properly?			
9. Initiate sample preservation methods, as appropriate?			
10. Clean/decontaminate sampling equipment between samples and after use?			
11. Record data in OEHMIS, as appropriate?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. When sampling with a trier, the trier is inserted at what angle?

A: 0 to 45° degrees

(Source: REAC SOP #2012, *Soil Sampling* (available at: http://www.epaossc.org/site/doc_list.aspx?site_id=2107)

2. In what soil type is the trier sampler is NOT recommended?

A: Compacted soil, clay or rocky soil.

(Source: Career Development Course 4B051)

STS Line Item 4.5.3.3(e): Collect soil / solid samples (Veihmeyer tube sampler)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	<ul style="list-style-type: none"> U.S. EPA Environmental Response Team (ERT)/REAC SOP 2001, <i>General Field Sampling Guidelines</i>.
Additional Supporting References:	<ul style="list-style-type: none"> ASTM D 4700, <i>Standard Guide for Soil Sampling from the Vadose Zone</i>
CDC Reference:	4B051
Training Support Material:	<ul style="list-style-type: none"> Veihmeyer tube sampler PPE (apron, gloves, eye protection) Sample container(s) Sample labels Decontamination supplies
Specific Techniques:	Conduct hands-on training and evaluation. Consider training related core task items with this item: Training Module 4.5.3.2, <i>Determine or establish soil/solid sampling strategies</i> , and Training Module 4.5.1.3, <i>Prepare and/or preserve samples for shipment</i> .
Criterion Objective:	Given the appropriate sampling equipment, collect a soil sample successfully completing all checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>The 4.5.3.3 series Training Modules [(Spade, scoop or trowel)(Trier sampler)(Veihmeyer tube sampler)(Auger)(Chip/Core sample)] convey task steps for individual sample collection techniques that may or may not be used by all BE flights. Trainers should select and focus training only to the modules that support specific training requirements at their installation. Refer to the flight Master Training Plan for specific training requirements.</p> <p>Ensure safety measures are used when collecting samples. Assess all hazards associated with the situation (i.e. hazardous atmosphere, hazardous conditions, etc.) and don appropriate PPE.</p> <p>The Veihmeyer is a good core sampler for most types of soil and can reach depths of up to 10 feet. It is the best sampler for undisturbed soil samples taken at depths greater than 1 foot. Its major limitation is that it cannot penetrate stony or rocky soil. The Veihmeyer sampler is used by driving the solid shaft to the desired sampling depth then driving a tube into the soil at the desired depth to collect the sample.</p>	

TASK STEPS

1. Identify the sample location and requirements.¹
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary.
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary.
4. Assemble the sampler by screwing in the tip and the drive head on the sampling tube.
5. Insert the tapered handle (drive guide) of the drive hammer through the drive head.
6. Place the sampler in a perpendicular position on the material to be sampled.
7. Drive the sampler into the material to the desired sampling depth.
8. Record the length of the tube that penetrated into the media.
9. Remove the drive hammer and fit the keyhole-like opening on the flat side of the hammer onto the drive head.
10. Rotate the sampler at least two revolutions to shear off the sample at the bottom.
11. Lower the sampler handle (hammer) until it just clears the two earlike protrusions on the drive head and rotate about 90°.
12. Withdraw the sampler from the material by pulling the handle (hammer) upward.
13. Dislodge the hammer from the sampler.
14. Turn the sampler tube upside down, tap the head gently against the hammer and carefully recover the sample from the tube.
15. Transfer the sample into the appropriate container.²
16. Cap and label the container.
17. Initiate sample preservation methods, as appropriate.
18. Clean/decontaminate sampling equipment between samples and after use.
19. Record data in OEHMIS (DOEHRS or equivalent), if applicable.

LOCAL REQUIREMENTS:**NOTES:**

1. Where, how much, equipment needed, etc. The sample strategy, if available, should address these issues.
2. Collect an adequate volume of sample based on the type(s) of analyses to be performed. If composite samples are to be collected, place sample in a stainless steel bowl for mixing, continue sampling and mix additional samples thoroughly with a stainless steel laboratory spoon or equivalent, and then transfer into the appropriate container.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.3(e): Collect soil / solid samples (Veihmeyer tube sampler)

- | |
|---|
| 1. Why is a tube sampler such as the Veihmeyer a good sampling device to collect VOCs? |
| 2. How far in depth can the Veihmeyer sampler bore into the ground in order to collect a soil sample? |
| 3. What is the major limitation of the Veihmeyer tube sampler? |

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.3(e): Collect soil / solid samples (Veihmeyer tube sampler)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify the sample location and requirements?			
2. Prepare sample container(s) per the servicing laboratory or appropriate guidance, if necessary?			
3. Decontaminate or pre-clean any equipment to be used for sampling, if necessary?			
4. Assemble the sampler by screwing in the tip and the drive head on the sampling tube?			
5. Insert the tapered handle (drive guide) of the drive hammer through the drive head?			
6. Place the sampler in a perpendicular position on the material to be sampled?			
7. Drive sampler into the material to the desired sampling depth?			
8. Record the length of the tube that penetrated into the media?			
9. Remove the drive hammer and fit the keyhole-like opening on the flat side of the hammer onto the drive head?			
10. Rotate the sampler at least two revolutions to shear off the sample at the bottom?			
11. Lower the sampler handle (hammer) until it just clears the two earlike protrusion on the drive head and rotate about 90°?			
12. Withdraw the sampler from the material by pulling the handle (hammer) upward?			
13. Dislodge the hammer from the sampler?			
14. Turn the sampler tube upside down, tap the head gently against the hammer and carefully recover the sample from the tube.			
15. Transfer the sample to the appropriate container?			
16. Cap and label the container?			
17. Initiate sample preservation methods, as appropriate?			

18. Clean/decontaminate sampling equipment between samples and after use?			
19. Record data in OEHMIS (DOEHRS or equivalent), if applicable?			
Did the trainee successfully complete the task?			

TRAINEE NAME (PRINT)

TRAINER NAME (PRINT)

ANSWERS

1. Why is a tube sampler such as the Veihmeyer a good sampling device to collect VOCs?

A: A tube sampler (such as the Veihmeyer) provides the least disturbed collection method.

(Source: : Career Development Course 4B051)

2. How far in depth can the Veihmeyer sampler bore into the ground in order to collect a soil sample?

A: The Veihmeyer sampler can reach depths of up to 10 feet.

(Source: : Career Development Course 4B051)

3. What is the major limitation of the Veihmeyer tube sampler?

A: It cannot penetrate stony or rocky soil.

(Source: : Career Development Course 4B051)

STS Line Item 4.5.3.4.2: FT-IR (e.g., HazMatID)

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	Complete Computer Based Training.
Training References:	HazMatID Equipment User's Manual. 2009
Additional Supporting References:	ESOH service center HazMatID checklist
CDC Reference:	4B051
Training Support Material:	HazMatID Soil sample Scoop
Specific Techniques:	Conduct hands-on training and evaluation.
Criterion Objective:	Given a HazMatID, perform pre-operational check and operate instrument successfully completing all checklist items with limited assistance on only the hardest parts.
Notes: * The HazMatID can be used for qualitative analysis of solids, powders, pastes, gels and liquids. The HazMatID is intended to provide initial determinations, presence and absence, of hazardous chemicals. The information obtained from the HazMatID is not an absolute or conclusive identification of unknown substances. *WARNING: <ul style="list-style-type: none"> • The HazMatID is NOT intrinsically safe. • DO NOT open battery compartment door in a contaminated environment. • HazMatID CANNOT identify sulfur, phosphorus, ionic salts, sodium chloride and calcium chloride. • CANNOT detect substances that are less than 10% of the sample composition. • CANNOT DETECT BIOLOGICAL AGENTS! Only detects the presence of proteins. 	

TASK STEPS

START UP FROM OFF:

1. Open the battery compartment.¹
2. Plug the power cable into the power connection in the battery compartment or into electrical outlet, if available.
3. Turn the black power switch to ON position.²

PREPARE FOR DATA COLLECTION:

4. Log on to the system.
5. Click **START** to proceed.
6. Clean the crystal with isopropyl alcohol.
7. Select **CONTINUE** to proceed to background collection.
8. Enter the Incident Name and Sample ID by using the Keyboard feature.^{3,4}

PREPARE SOLID SAMPLES:

9. Apply the pressure arm so the pressure tip contacts the sample.
10. View the absorbance spectrum.⁵

PERFORM THE ANALYSIS:

11. Click on **Continue** to proceed.⁶
12. Select the **VISUAL COMPARE** button to compare the sample spectrum to spectra from the search list.⁷
13. Click **OVERLAY** to view the spectra over one another.
14. Accurately identify three criteria for positive identification.⁸

LOCAL REQUIREMENTS:

NOTES:

1. Lift the small round screw cover on the right of the battery compartment. Using a flat/slotted screw driver, turn the battery cover screw counterclockwise.
2. Allow the analyzer to warm up for 20 minutes. You will be prompted on the screen to “Please Log In”
3. See the “Testing a Material” section of the HazMatID Software User’s Guide for additional details.
4. The Sample ID name will have a date and time stamp added to the end of the name. Use names that you will be able to identify at a later date
5. An absorbance value of 0.1 or greater is necessary to acquire library surgical spectrum. If 0.1 is not achieved, use the view camera to visualize proper sample placement. Position and reanalyze the sample until an absorbance of 0.1 is achieved. Most solid samples will need to be crushed in order to achieve an absorbance value of 0.1 units
6. When the collection process is complete, your spectral data and library search results will be displayed.
7. The Compare Spectra dialog box is displayed.
8. Additionally, the following three criteria must be met for a positive identification:
 - Quality (correlation) over 0.95
 - Sample and library match VISUALLY
 - PHYSICAL properties match

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.4.2: FT-IR (e.g., HazMatID)

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
START UP FROM OFF:			
1. Open the battery compartment?			
2. Plug the power cable into the power connection in the battery compartment or into electrical outlet?			
3. Turn the black power switch to ON position?			
PREPARE FOR DATA COLLECTION:			
4. Log on to the system?			
5. Click START to proceed?			
6. Clean the crystal with isopropyl alcohol?			
7. Select CONTINUE to proceed to background collection?			
8. Enter the Incident Name and Sample ID by using the Keyboard feature?			
PREPARE SOLID SAMPLES:			
9. Apply the pressure arm so the pressure tip contacts the sample?			
10. View the absorbance spectrum?			
PERFORM THE ANALYSIS:			
11. Click on Continue to proceed?			
12. Select the VISUAL COMPARE button to compare the sample spectrum to spectra from the search list?			
13. Click OVERLAY to view the spectra over one another?			

14. Accurately identify three criteria for positive identification?			
Did the trainee successfully complete the task?			

TRAINEE NAME (PRINT)

TRAINER NAME (PRINT)

STS Line Item 4.5.3.5: Field analyze soil/solid samples

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	4.5.2.6.1 Detector Tubes or Chips (e.g., Drager CDS Kit) 4.5.2.6.2 PID/FID 4.5.2.6.3 Portable GC-MS (e.g., Hapsite) 4.5.2.6.4 Combustable Gas Meters 4.5.3.4.2 FT-IR (e.g., HAZMAT ID)
Training References:	<i>Fundamentals of Industrial Hygiene</i> , 6 th Ed. Chp 17 or most current edition OSHA Technical Manual TED 1-0.15A, Sec II, Chp 3 NIOSH Manual of Analytical Methods, Chp D Manufacturer's Instructions per specific equipment 886H Allowance Standard
Additional Supporting References:	ESOH Service Center website: CBRN Equipment page
CDC Reference:	4B051
Training Support Material:	<ul style="list-style-type: none"> • Training Scenario(s) • Lead Test Check kit, or similar available kit • Multi-gas meter • Drager hand-held pump with Colorimetric tubes • TVA-1000 FID/PID • HAPSITE • HazMatID • XRF
Specific Techniques:	Conduct hands-on training and evaluation.
Criterion Objective:	Given scenario(s), demonstrate the proper selection, preparation and operation of (selected) analysis equipment in successfully conducting field soil/solid sampling analysis while completing all performance checklist items with limited trainer assistance on only the hardest parts.
Notes: <p>This training module focuses on equipment that is available to each BE flight throughout the AF - equipment items listed on the 886H Allowance Standard. This TRAINING MODULE has been designed to be completed as individual units or a compound scenario. Additional training requirements for equipment specific to your location may exist for this line item. Consult the Master Training Plan (MTP) for exacting item. For conducting training on additional items, the trainer may consider developing a separate TRAINING MODULE document based on this format.</p> <p>NOTE: Operators of the Niton XRF Spectrum Analyzer must be certified to use the instrument through specific training requirements identified in the radioactive material (RAM) permit. The flight Master Training Plan should indicate which duty positions may be required to operate this equipment item. Consult the RAM permit and MTP to identify training requirements and amend the module in the Local Requirements section, if necessary.</p>	

TASK STEPS

The procedures should be noted and applied (depending on relevance or selection) to each instrument and its subsequent task steps:

1. Identify the purpose of conducting the sampling.
2. Determine the substance(s) being sampled, if applicable and possible.
3. Determine sampling location.
4. Perform initial operations check of instrument(s).
5. Collect sample as appropriate.
6. Select appropriate instrument(s) for sampling.
7. Analyze a sample using a Lead Test Check kit.¹
8. Analyze a sample using a Multi-gas meter.²
9. Analyze a sample using a Drager hand-held pump, with colorimetric tube(s).³
10. Analyze a sample using TVA-1000 FID/PID (Quickstart method).⁴
11. Analyze a sample using the HAPSITE.⁵
12. Analyze a sample using the HazMat ID.⁶
13. Analyze a sample using a handheld Thermo Scientific Niton (XRF) analyzer.⁷
14. Compile data to render analysis report and, as applicable, identify concentration(s) of substance(s).⁸
15. Utilize OEHMIS (DOEHRIS).

LOCAL REQUIREMENTS:

NOTES:

1. Analyze a sample using a Lead Test Check kit.
 - 1.1. Clean and remove all dust and dirt from the area to be tested.
 - 1.2. With a clean knife or scraper, cut a small \sim in notch at a diagonal to expose all painted layers down to the bare surface.
 - 1.3. Activate a swab.
 - 1.3.1. Crush ampules with the swab tip pointing up.
 - 1.3.2. Shake and squeeze with the swab tip pointing down until the yellow liquid appears on the swab tip - the swab is now activated for testing.
 - 1.4. Rub the swab tip on the test area for 30 sec while squeezing gently.
 - 1.5. Observe for color change: pink indicates lead present.
 - 1.6. Record result.
 - 1.7. Proceed to additional task steps to conduct further testing OR continue to step 14.
2. Analyze a sample using a Multi-gas meter.
 - 2.1. Turn on mutli-gas meter in clean, fresh air environment.
 - 2.2. Observe reading to verify no gas present.
 - 2.3. Check battery condition.
 - 2.4. Perform calibration check.
 - 2.4.1. Attach the regulator to the cylinder.

- 2.4.2. Connect the tubing to the regulator.
 - 2.4.3. Open the valve on the regulator and connect the other end of the tubing to the multi-gas meter inlet fitting.
 - 2.4.4. Compare readings on multi-gas meter with expected limits noted on the calibration cylinder.
 - 2.5. Attach sampling lines and related equipment (if available) and collecting a sample from a remote or inaccessible location (if needed).
 - 2.6. Expose instrument to environment.
 - 2.7. Record meter readings.
 - 2.8. Proceed to additional task steps to conduct further analysis OR continue to step 14.
3. Analyze a sample using a Drager hand-held pump, with colorimetric tube(s).
 - 3.1. Leak test pump before each series.
 - 3.1.1. Insert unopened tube into tube holder.
 - 3.1.2. Squeeze pump completely and release.
 - 3.1.3. Observe pump after 15 minutes; pump is adequately leak-proof if the end-of-stroke indicator has not appeared.
 - 3.1.4. Remove tube.
 - 3.1.5. Reset stroke counter to zero.
 - 3.2. Prepare tubes.
 - 3.2.1. Select tube and read relevant instructions for use.
 - 3.2.2. Open both ends of tube with tube opener.
 - 3.2.3. Insert the tube into the pump with arrow towards the pump.
 - 3.3. Begin measurement.
 - 3.3.1. Determine number of strokes according to operating instructions for tube.
 - 3.3.2. Expose instrument to environment to be sampled.
 - 3.3.3. Hold pump between thumb and index finger so that end-of-stroke indicator and stroke counter are facing the user.
 - 3.3.4. Squeeze pump fully.
 - 3.3.5. Release pump until the number on the stroke counter matches the number of strokes recommended by the operating instructions for the tube.
 - 3.4. Evaluate result IAW the instructions for the tube.
 - 3.5. Record results.
 - 3.6. Remove tube.
 - 3.7. Flush pump with a few pump strokes in clean air.
 - 3.8. Proceed to additional task steps to conduct further analysis OR continue to step 14.
4. Analyze a sample using TVA-1000 FID/PID (Quickstart method).
 - 4.1. Connect sample probe.
 - 4.2. Fill/install hydrogen tank.
 - 4.3. Open the hydrogen valve.
 - 4.4. Start the unit per the manufacturer's instructions.
 - 4.5. Expose the instrument to the environment to be sampled.
 - 4.6. Use the Control menu to turn pump. FID and PID ON/OFF as needed.
 - 4.7. Read and record results.
 - 4.8. Proceed to additional task steps to conduct further analysis OR continue to step 14.
5. Analyze a sample using the HAPSITE.
 - 5.1. Determine sampling location.
 - 5.2. Prepare the instrument.
 - 5.2. Operate the instrument.
 - 5.3. Collect sample.
 - 5.4. Run test.
 - 5.5. Read and record results.
 - 5.6. Proceed to additional task steps to conduct further testing OR continue to step 14.
6. Analyze a sample using the HazMat ID.
 - 6.1. Clean the crystal prior to using the instrument.
 - 6.2. Apply sample to the crystal.
 - 6.5. Run test.
 - 6.6. Read and record results.
 - 6.7. Proceed to additional task steps to conduct further analysis OR continue to step 14.

7. Analyze a sample using a handheld Thermo Scientific Niton (XRF) analyzer.
 - 7.1. Determine sampling location.
 - 7.2. Prepare the instrument.
 - 7.2. Operate the instrument.
 - 7.3. Collect sample.
 - 7.4. Run test.
 - 7.5. Read and record results.
 - 7.6. Proceed to additional task steps to conduct further analysis OR continue to step 14.
8. This will depend on the capabilities of the device(s) used to conduct the test(s).

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.5: Field analyze soil/solid samples

- | |
|--|
| 1. Given an area of obvious contamination, where should soil/samples be collected? |
| 2. Why is the presence of interferent gases cause for concern? |
| 3. How often must a calibration check be performed on a multi-gas meter? |
| 4. True or False: When leak testing the the Drager hand-held pump, it is important to be certain to open the tube before inserting into the tube holder. |

5. A contaminant source is indicated if the number of ppm reading on the TVA-1000B equals or exceeds what number?

6. Along with providing real-time on-scene results, what is the biggest advantage of the HAPSITE chemical identification system?

7. List three possible scenarios for using the HAZMAT ID:

8. List the main limitation or weakness of the HAZMAT ID:

9. List three elements identifiable by the XRF analyzer:

10. Match the field instrument(s) to the soil media it is best designed to screen (more than one may apply):

Volatiles

Non-volatiles

Explosives

Metals

Radiation

A. HAZMATID™

B. SAM935

C. TVA-1000B

D. HAPSITE

E. ADM-300

F. XRF

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.5: Field analyze soil/solid samples

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Identify the purpose of conducting the sampling?			
2. Determine the substance(s) being sampled, if applicable and possible?			
3. Determine sampling location?			
4. Perform initial operations check of instrument(s)?			
5. Collect sample as appropriate?			
6. Select appropriate instrument(s) for sampling?			
7. Analyze a sample using a Lead Test Check kit?			
8. Analyze a sample using a multi-gas meter?			
9. Analyze a sample using a Drager hand-held pump, with colorimetric tube(s)?			
10. Analyze a sample using TVA-1000 FID/PID (Quickstart method)?	*		
11. Analyze a sample using the HAPSITE?	*		
12. Analyze a sample using the HazMat ID?	*		
13. Analyze a sample using a handheld Thermo Scientific Niton (XRF) analyzer?	*		
14. Compile data to render analysis report and, as applicable, identify concentration(s) of substance(s)?			
15. Utilize OEHMIS (DOEHRS)?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. Given an area of obvious contamination, where should soil/samples be collected?

A: If soil contamination is obvious, you should collect samples from the least contaminated areas first then work your way to the most contaminated areas.

(Source: Career Development Course 4B051)

2. Why is the presence of interferent gases cause for concern?

A: Interferent gases can adversely affect the sampling device, causing inaccurate readings.

(Source: Career Development Course 4B051)

3. How often must a calibration check be performed on a multi-gas meter?

A: Multi-gas meters must have a calibration check performed before each day of use.

(Source: USAF ESOH MSA PASSPORT Fact Sheet)

4. True or False: When leak testing the Drager hand-held pump, it is important to be certain to open the tube before inserting into the tube holder.

A: False.

(Source: Career Development Course 4B051)

5. A contaminant source is indicated if the number of ppm reading on the TVA-1000B equals or exceeds what number?

A: A contaminated source is considered present if the PID/FID reading equals or exceeds 5.0 ppm.

(Source: Career Development Course 4B051)

6. Along with providing real-time on-scene results, what is the biggest advantage of the HAPSITE chemical identification system?

A: The biggest advantage the HAPSITE brings to the table is its ability of detecting contaminants of concern at levels below other detector's threshold levels. The detection range of the HAPSITE extends into the parts-per-trillion (ppt) range.

(Source: Career Development Course 4B051)

7. List three possible scenarios for using the HAZMAT ID:

A: The HAZMATID™ instantly compares a sample's infrared fingerprint against onboard databases to provide the identity of the unknown. Therefore, it can be used in the following scenarios:

- ID of weapons of mass destruction (WMD) (e.g., nerve and blister agents)
- ID of toxic industrial chemicals (TICs)
- ID of forensic drugs and Clan Lab precursors
- ID of white powders
- ID of explosives
- ID of WMD precursors
- ID Common chemicals

(Source: Career Development Course 4B051)

8. List the main limitation or weakness of the HAZMAT ID:

A: The major weakness of the HAZMATID™ is that it can only identify, not quantify; thus, it cannot be used in health risk assessments (in most cases).

(Source: Career Development Course 4B051)

9. List three elements identifiable by the XRF analyzer:

Niton XRF analyzers can quantify elements ranging from magnesium (element 12) through uranium (element 92).

(Source: Career Development Course 4B051)

10. Match the field instrument(s) to the soil media it is best designed to screen (more than one may apply):

A:

Volatiles	D and E
Non-volatiles	A
Explosives	A
Metals	F
Radiation	B and F

G. HAZMATID™
H. SAM935
I. TVA-1000B
J. HAPSITE
K. ADM-300
L. XRF

(Source: Career Development Course 4B051)

STS Line Item 4.5.3.6: Interpret soil sample results

TRAINER GUIDANCE

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.
Prerequisites:	None
Training References:	<ul style="list-style-type: none"> USAPHC Reference Document 230 Methodology for Determining Chemical Exposure Guidelines for Deployed Military Personnel 2013 revision.
Additional Supporting References:	
CDC Reference:	4B051
Training Support Material:	None
Specific Techniques:	Conduct hands-on training and evaluation.
Criterion Objective:	Given a list of hazardous chemicals in soil and soil sample results, identify the appropriate military exposure guideline (MEG), determine degree of contamination, and make recommendations, successfully completing all checklist items with limited trainer assistance on the hardest parts.
Notes: <p>Trainers must provide trainee with a scenario, including results, for trainee to interpret.</p> <p>Scenario: You are deployed to an FOB which is undergoing expansion. CE is building a new structure, and you've sampled for beryllium and chromium VI in a bulk soil samples. Your first sample was collected by scooping loose soil from the top layer and showed 0.000074 mg/kg of beryllium. Your second sample was collected 6 inches deep and showed 0.0028 mg/kg chromium VI.</p>	

TASK STEPS

1. Read soil sample results; determine appropriate military exposure guideline (MEG).¹
2. Compare results to MEGs.²
3. List hazards associated with chemical.³

LOCAL REQUIREMENTS:**NOTES:**

1. Trainees must identify results, and locate MEGS for chemicals sampled to include type and location of sample.
2. Make sure both numbers are in same unit of measurement. Soil sample MEGS are listed in mG/kg.
3. Trainees must determine if sample is above or below MEG, route of entry, and hazards posed by chemical.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.6: Interpret soil sample results

1. Where do you find standards for soil contamination?

2. What needs to be done before we can compare sample results to MEGs?

3. What type of hazards is associated with the chemicals and are they above or below OEEL?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.6: Interpret soil sample results

Proficiency Code:	2b
PC Definition:	Can do most parts of the task. Needs help only on hardest parts. Can determine step-by-step procedures for doing the task.

DID THE TRAINEE...		YES	NO
1. Read soil sample results, determine appropriate MEGs?			
2. Compare results to MEGs?			
3. List hazards associated with chemical?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. Where do you find standards for soil contamination?

A: USAPHC Tech Guide 230, Appendix F

(Source: USAPHC Tech guide 230, Appendix F)

2. What needs to be done before we can compare sample results to MEGs?

A: Ensure results and standards are in same units of measurement

(Source: Career Development Course 4B051)

3. What type of hazards is associated with the chemicals and are they above or below OEEL?

A: Chromium VI ingestion hazard (Above OEEL for ingestion, sample below 2 CM and not a VOC)
Beryllium Inhalation hazard (Above OEEL for inhalation, sample within top 2 CM)

(Scenario provided to student and USAPHC reference document 230 section 6.2 151-156;
NIOSH Pocket guide and TLV guide for applicable chemicals)

STS Line Item 4.5.3.7: DOEHRS data entry

TRAINER GUIDANCE

Proficiency Code:	3c
PC Definition:	Can do all parts of the task. Needs only a spot check of completed work. Can identify why and when the task must be done and why each step is needed
Prerequisites:	None
Training References:	DOEHRS Student Guides https://doehrs-ih.csd.disa.mil/doehrs/displaystudentguides.do
Additional Supporting References:	
CDC Reference:	4B051
Training Support Material:	None
Specific Techniques:	Have trainee enter information into DOEHRS IAW DOEHRS student guides
Criterion Objective:	Given a source of data (case file, sampling event, observations, etc.), input data into DOEHRS system IAW DOEHRS student guides and applicable local policy successfully completing all steps with NO trainer assistance.
Notes: Trainee must be given information from case files to enter into DOEHRS	

TASK STEPS

1. Determine type of data.¹
2. Enter correct module of DOEHS.
3. Input data.²
4. Verify accuracy of data.

LOCAL REQUIREMENTS:**NOTES:**

1. Data may be any one of the following types:
 - Observations and notes or shop data
 - Environmental survey
 - Radiation survey
 - Incident response
 - SEG survey
2. Be sure to fill out all mandatory forms IAW applicable DOEHS student guides and local policy.

TRAINEE REVIEW QUESTIONS

STS Line Item 4.5.3.7: DOEHRS data entry

1. What is the AF-approved OEH Management Information System called?

2. What are the four modules of DOEHRS?

3. What must be documented in DOEHRS?

PERFORMANCE CHECKLIST

STS Line Item 4.5.3.7: DOEHRS data entry

Proficiency Code:	3c
PC Definition:	Can do all parts of the task. Needs only a spot check of completed work. Can identify why and when the task must be done and why each step is needed

DID THE TRAINEE...		YES	NO
1. Determine type of data?			
2. Enter correct module of DOEHRS?			
3. Input data?			
4. Verify accuracy of data?			
Did the trainee successfully complete the task?			

 TRAINEE NAME (PRINT)

 TRAINER NAME (PRINT)

ANSWERS

1. What is the AF-approved OEH Management Information System called?

A: Defense Occupational and Environmental Health Readiness System (DOEHRS).

(Source: Career Development Course 4B051)

2. What are the four modules of DOEHRS?

A: Industrial Hygiene, Environmental Health, Radiation, Incident Reporting

(Source: Career Development Course 4B051)

3. What must be documented in DOEHRS?

A: All information relating to OEH health risk assessment

(Source: Career Development Course 4B051)